



Installation Instructions

REV 4 09/01/21

Part No. 1430, 1431, 1432

Product: Running Boards

Application:

Chevy Silverado 2019+

GMC Sierra 2019+


Level of Difficulty: 1 2 3 4 5

Installation Time: 60 Min.

Hardware	Torque Specifications
M6 Bolt	3 ft-lbs.
M8 Bolt	7 ft-lbs.
M10 Bolt	16 ft-lbs.
M12 Bolt	28 ft-lbs.

ATTENTION: Use correct torque settings to avoid damaging the running boards and or mounting brackets. Failure to do so will void your warranty.

If you have any questions please contact our technical team at 1-866-717-6645

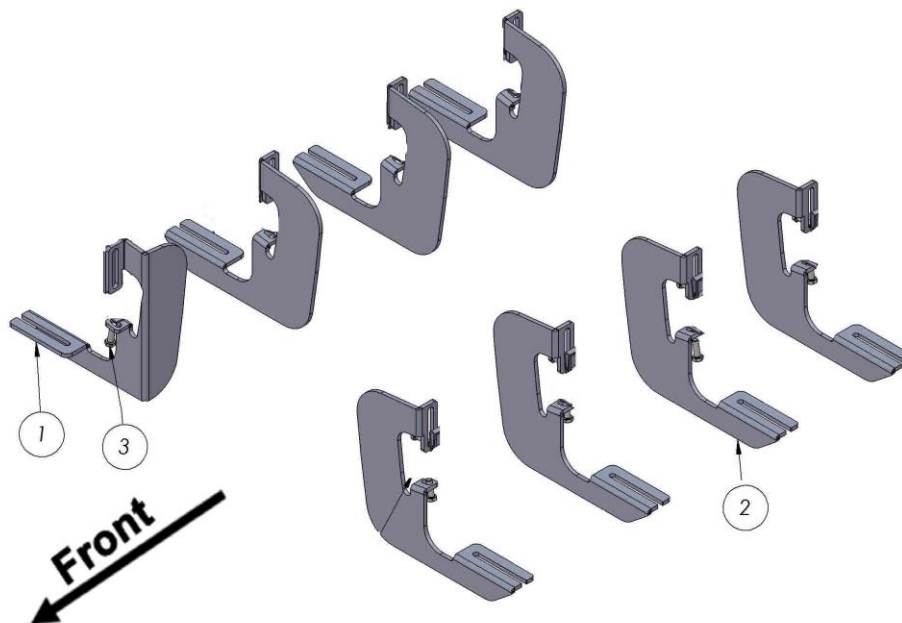

ITEM	PART NUMBER	QTY
1	SILVERADOF0C0BP PASSENGER	4
2	SILVERADOF0C0BDDRIVER	4
3	DIN 933 BOLT M8 x 25	16

- Regular Cab uses 4 brackets
- Extended Cab uses 6 brackets
- Crew Cab uses 8 brackets


Installation Instructions 1430,1431,1432 Bracket Kit

**Video
Installation
Instruction:**

Step 1: Locate mounting locations and hardware as per 1st page of this installation manual

Step 2: Remove factory rubber plugs as shown on Figure 1.

Step 3: Install brackets using supplied M8 hardware Figure 2. **Depending on your vehicle Single Cab uses 4 brackets, Extended Cab uses 6 brackets and Crew Cab uses 8 brackets.** Do not tighten

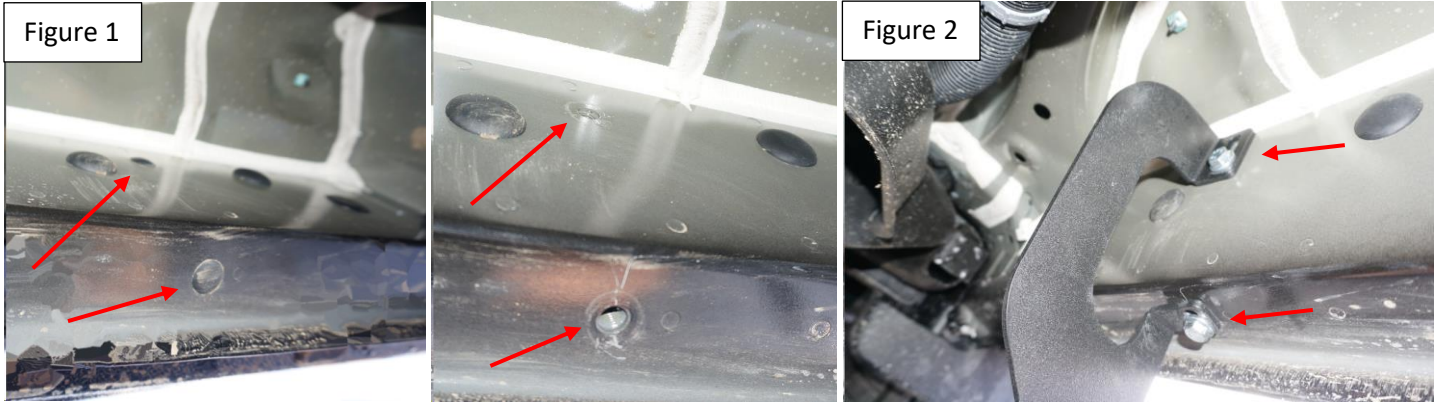


Step 4: Proceed to last page of this manual for running board install instructions and torque values

For Technical support please call our team at 1-866-717-6645 and one of our experts will assist you with this installation.

Thank you for choosing Romik

Running Board Installation Instructions

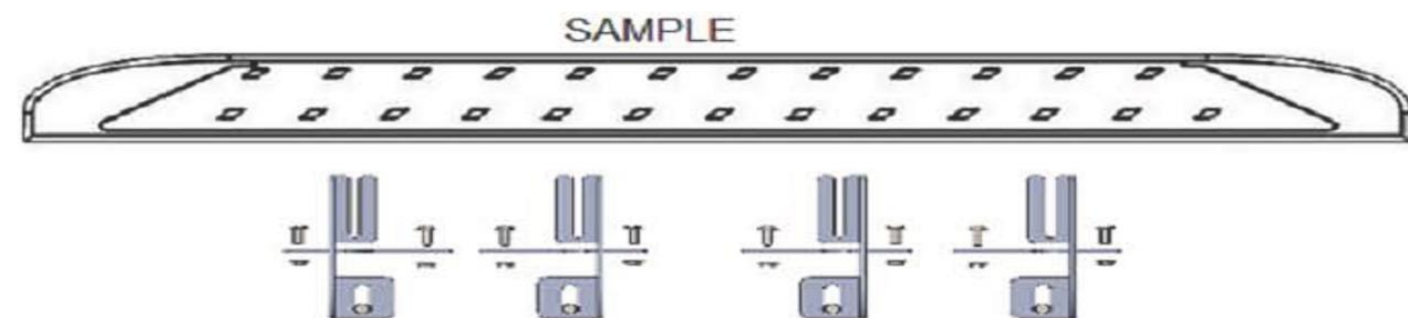

RAL / RB2 / REC / RCV / RZR



ROB / ROF / RPD

- 1) Flip your Romik running boards onto a flat surface, make sure to place the running boards on a towel or cardboard in order to protect the surface Figure 1.
- 2) Loosen the M8 bolts on back of your running boards Figure 2. Depending on your model there will be either 6 or 8 bolts installed per side.
- 3) Once your brackets have been installed, place the running board onto the brackets as shown on Figure 3.
- 4) Adjust running boards, centering on vehicle. Hand tight M8 hardware on running boards.
- 5) Follow the torque procedures, torque M8 hardware to **7 ft-lbs** using a torque wrench.
- 6) Cleaning and maintaining your running boards is important, apply a light coat of a quality carnauba wax at least 2X per year. Wash often with mild soap and make sure to remove all soap residue. Many car automatic carwashes use a strong soap, make sure to use enough water to remove all residue.
- 7) Register your products at www.Romik.com/contact/productregistration
- 8) Warranty information at www.Romik.com/warranty