



Installation Instructions

Part No. 1436

Product: Running Boards

Application: **Chev Colorado 2023 – Present**

GMC Canyon 2023 - Present

Level of Difficulty: 1 2 3 4 5

Installation Time: 90 Min.


REV 1 07/01/23

Hardware	Torque Aluminum	Torque Steel to Steel
M6 Bolt	3 ft-lbs.	14 ft-lbs.
M8 Bolt	7 ft-lbs.	35 ft-lbs.
M10 Bolt	16 ft-lbs.	64 ft-lbs.
M12 Bolt	28 ft-lbs.	112 ft-lbs.

ATTENTION: Use correct torque settings to avoid damaging the running boards and or mounting brackets. Failure to do so will void your warranty. If you have any questions, please contact our technical team at 1-866-717-6645

Attention: Please make sure that you have the latest instructions from *Romik.com*

QR Scan

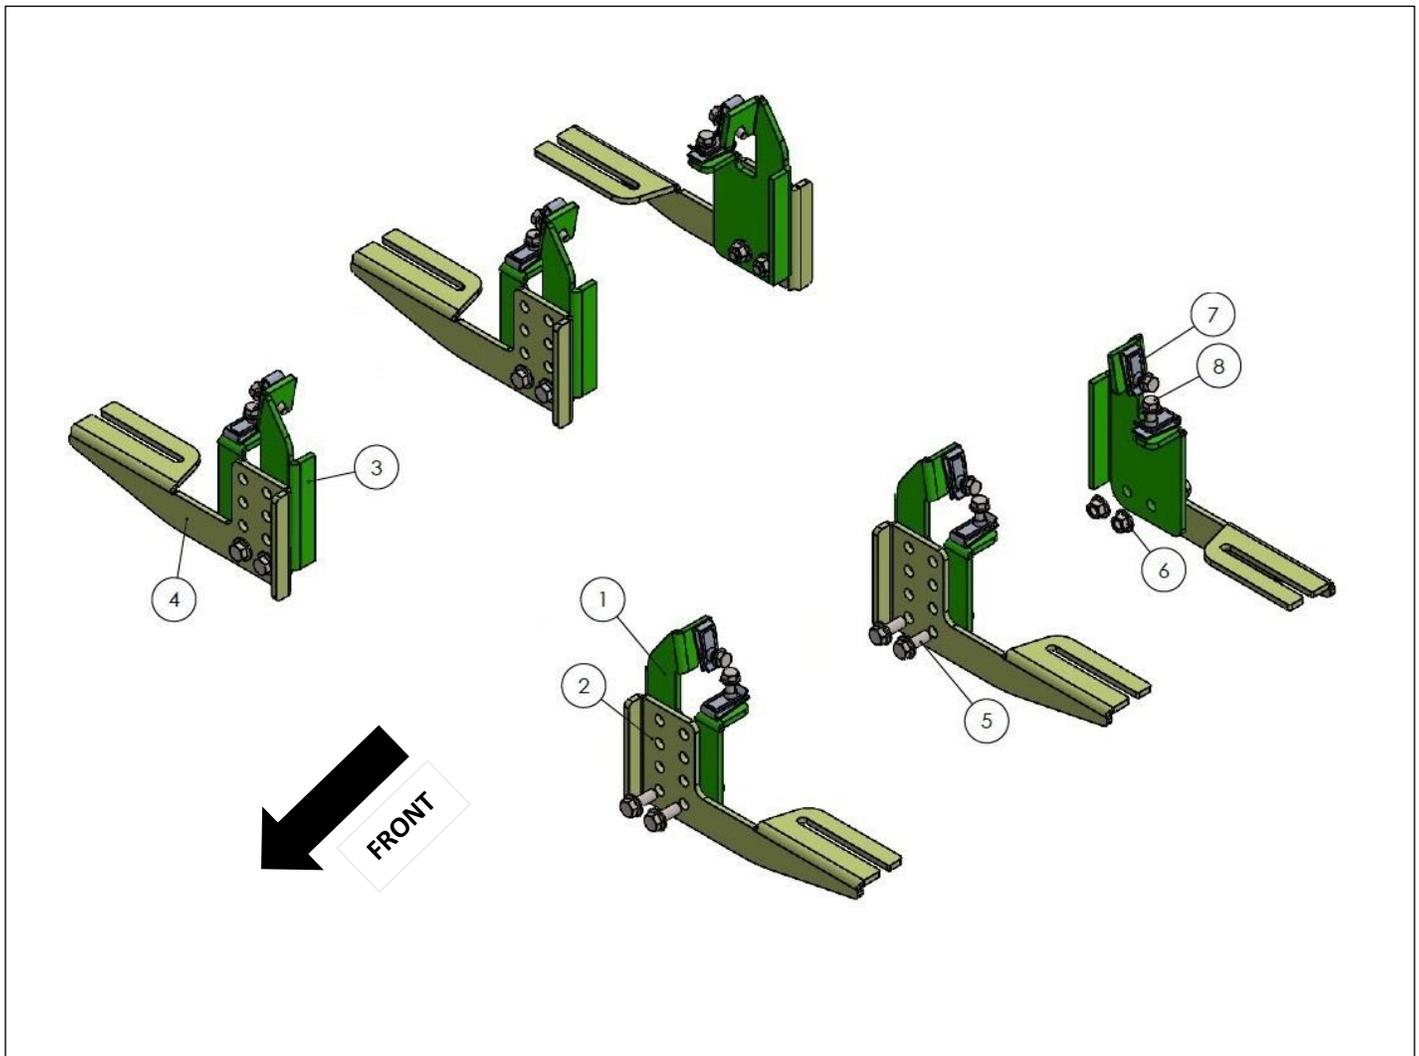


1436

1



DRIVER / PASSENGER SIDE
BRACKET-1
3 x QTY

2

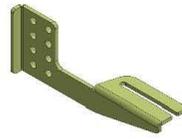

DRIVER / PASSENGER SIDE
BRACKET-2
3 x QTY

3



DRIVER SIDE
BRACKET-1
3 x QTY

4



DRIVER / PASSENGER SIDE
BRACKET-2
3 x QTY

HARDWARE

5



M10x25 HEX
FLANGE BOLT
12x

6



M10 HEX
FLANGE NUT
12x

7



HTC 308 –
M8 U-NUT
12x

8



M8x30 HEX
FLANGE BOLT
12x


Installation Instructions “DRP” 1436 Bracket Kit

Thank you for choosing the Romik DRP System. This system allows you to adjust the brackets from 0 to 3-inch drop. If you ordered the **optional** DRP cover you can customize them to match the desired height by cutting on the lines inside the cover. Please test before cutting, in many cases you will be able to tuck the cover behind the body of the vehicle without cutting. NOTE: **Blue Loctite is recommended on all metal parts**




Step 1: Locate 3 mounting points Figure 1.

Figure 1

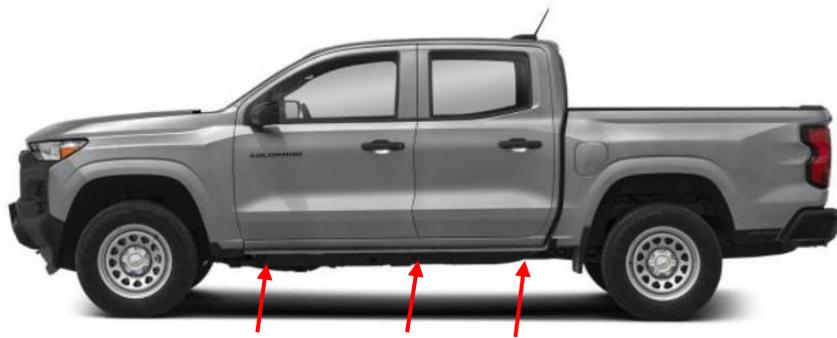

Step 2: Remove factory rubber plugs and install provided U clips. Assemble “DRP” bracket and set to desired height. See the top of this page for height reference. Attach to vehicle do not tighten figure 2.

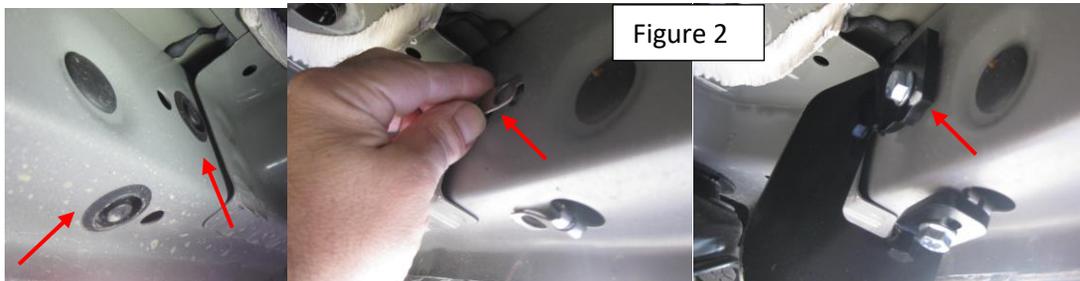

Step 3: Torque #5 bolts to 35 lbs. Level #2 and #4 and Torque #8 bolts to 64 lbs. Repeat on remaining 2 locations.

Step 4: Install “DRP” covers if applicable and proceed to last page of this manual for running board install instructions and torque values. Use of a level is recommended.

NOTE: DRP system is designed to assist you getting in and out of the vehicle. However the lower you place the brackets the lower the weight rating. For maximum weight capacity use DRP brackets at zero.

For Technical support please call our team at 1-866-717-6645 and one of our experts will assist you with this installation.

Thank you for choosing Romik.

Installation Instructions Running Boards

NOTE: Use of power tools will damage the bottom of the running board and void your warranty.

Step 1: loosen the M8 hardware on back of the running boards.

Step 2: Slide running board onto brackets

Step 3: Tighten hardware to 7 ft lbs.




ROF/RPD/ROB Running boards

Step 1: Place clamping plate on top of running board as shown below. Make sure clamping plate sits correctly on running board surface.

Step 2: Install carriage bolts and plastic retaining clips as shown below.

Step 3: Install and tighten hardware to 7 ft lbs.

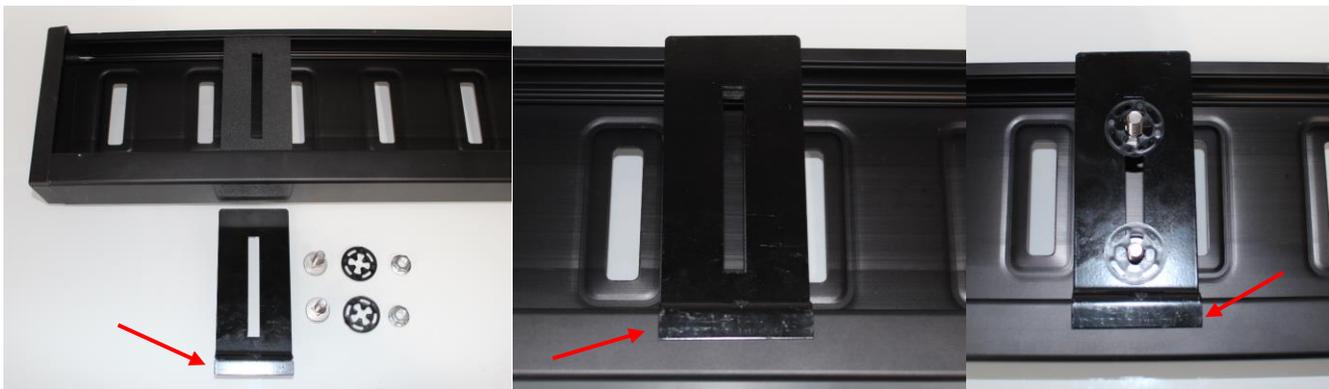

Product Registration and Warranty Information

- Register your Romik products at <https://romik.com/productregistration>
- Warranty information at <http://www.romik.com/warranty>

Cleaning and maintaining your Romik Running boards

Cleaning and maintaining your running boards is important, apply a light coat of a quality carnauba wax at least 2X per year. Wash often with mild soap and make sure to remove all soap residue. Many car automatic carwashes use a strong soap, make sure to use enough water to remove all residue.

For video instructions on how to clean your Romik products please click here <https://romik.com/cleaning>