



## Installation Instructions

REV 3 04/15/20

Part No. **3125**

Product: Running Boards

Application: **Mitsubishi**

**Outlander 2007+**

**Outlander Sport 2011+**


Level of Difficulty: **1 2 3 4 5**

Installation Time: 60 min


Hardware	Torque Specifications
M6 Bolt	3 ft-lbs.
M8 Bolt	7 ft-lbs.
M10 Bolt	16 ft-lbs.
M12 Bolt	28 ft-lbs.

**ATTENTION:** Use correct torque settings to avoid damaging the running boards and or mounting brackets. Failure to do so will void your warranty.

If you have any questions please contact our technical team at 1-866-717-6645

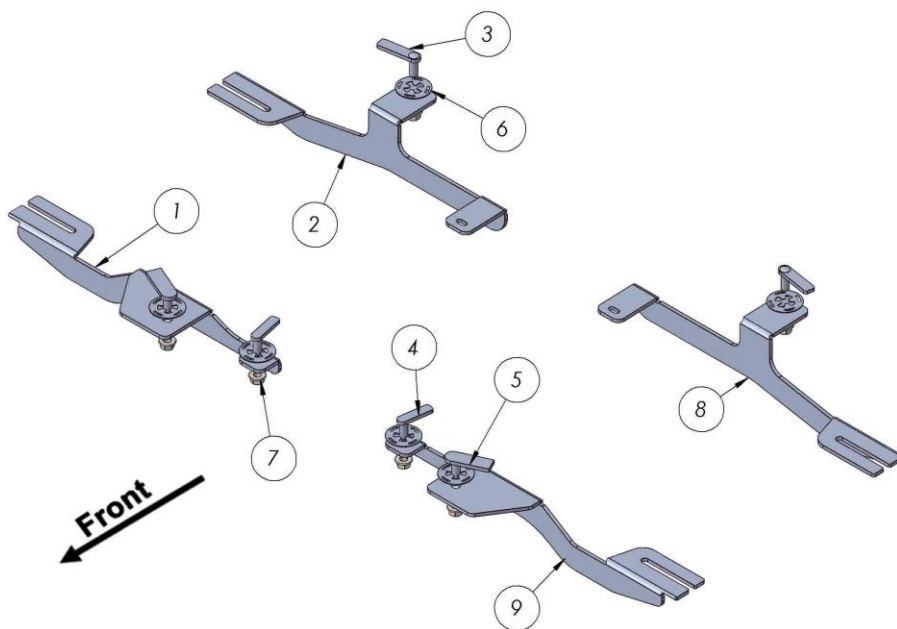

ITEM	PART NAME	QTY
1	3125850F0 PASSENGER	1
2	3125850B0 PASSENGER	1
3	HTC 262 - M10x30(5x15x60)	2
4	HTC 243 - M10x25(5x13x50)	2
5	HTC 230 - M10x25(5x20x60)	2
6	HTC 269 - KLIPS (M10)	6
7	DIN 6923 FLANGE NUT M10	6
8	3125850B0 DRIVER	1
9	3125850F0 DRIVER	1

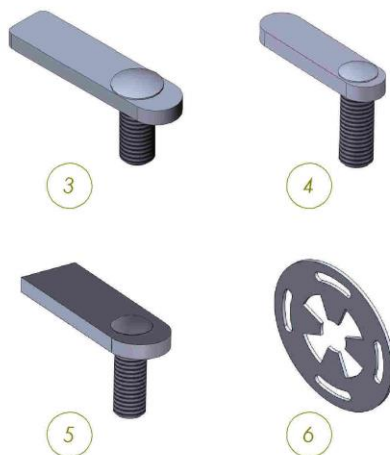

# Installation Instructions 3125 Bracket Kit


Video  
Installation  
Instruction:

**NOTE:** Depending on the model and trim you may have to either remove or trim a plastic cover in the rear section mounting area.

**Step 1:** Locate front mounting locations and hardware as per 1<sup>st</sup> page of this installation manual


**Step 2:** Install provided HTC 230 as shown on Figure 1.

**Step 3:** Install front bracket as shown on Figure 2. Do not tighten

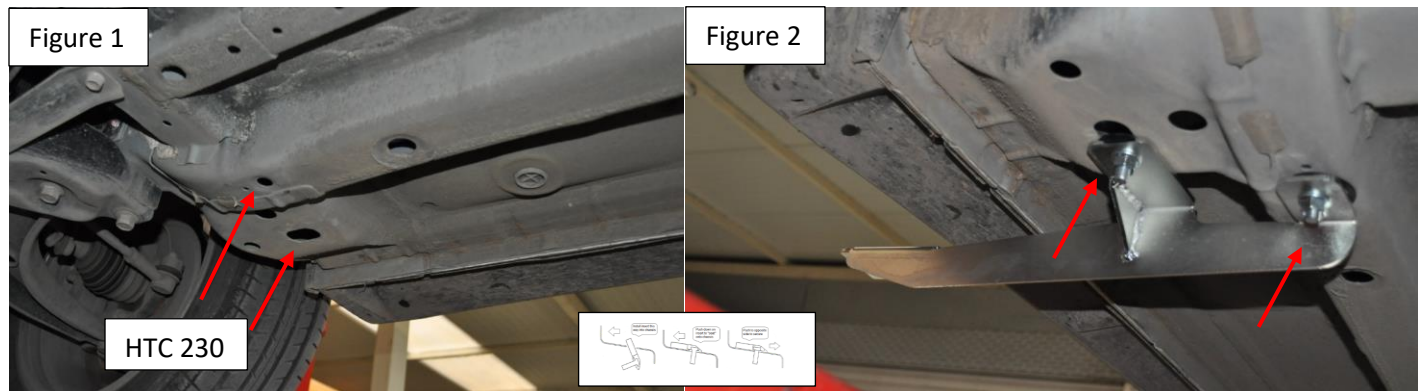

**Step 4:** Remove factory nut holding plastic panel, do not discard as it will be reused. Option #1 trim the corner of the panel as shown on Figure 3. Option #2 remove entire panel.

**Step 5:** Install provided HTC 243 Figure 3. Install rear bracket as shown Figure 4. Do not tighten. If you decide to keep the panel bracket must go under it.

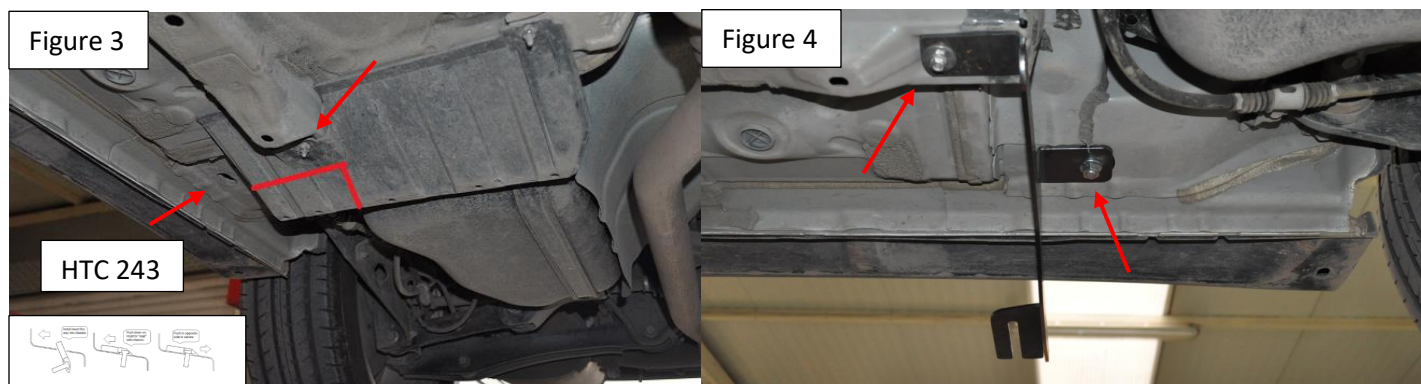


**Step 6:** Proceed to last page of this manual for running board install instructions and torque values

For Technical support please call our team at 1-866-717-6645 and one of our experts will assist you with this installation

***Thank you for choosing Romik.***

# Running Board Installation Instructions

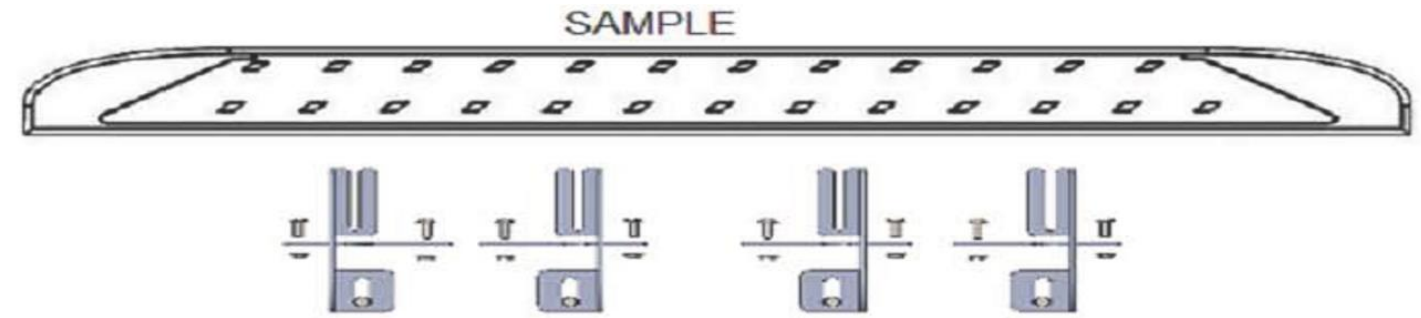

**RAL / RB2 / REC / RCV / RZR**



**ROB / ROF / RPD**

- 1) Flip your Romik running boards onto a flat surface, make sure to place the running boards on a towel or cardboard in order to protect the surface Figure 1.
- 2) Loosen the M8 bolts on back of your running boards Figure 2. Depending on your model there will be either 6 or 8 bolts installed per side.
- 3) Once your brackets have been installed, place the running board onto the brackets as shown on Figure 3.
- 4) Adjust running boards, centering on vehicle. Hand tight M8 hardware on running boards.
- 5) Follow the torque procedures, torque M8 hardware to **7 ft-lbs** using a torque wrench.
- 6) Cleaning and maintaining your running boards is important, apply a light coat of a quality carnauba wax at least 2X per year. Wash often with mild soap and make sure to remove all soap residue. Many car automatic carwashes use a strong soap, make sure to use enough water to remove all residue.
- 7) Register your products at [www.Romik.com/contact/productregistration](http://www.Romik.com/contact/productregistration)
- 8) Warranty information at [www.Romik.com/warranty](http://www.Romik.com/warranty)