

ROMIK

Installation Instructions

Part No. 3247

Product: Running Boards

Application: **Nissan Murano 2025 - Present**

Level of Difficulty: 1 2 **3** 4 5

Professional Installation Time: 90 Min.

DIY Installation Time: 180 Min


REV 1 06/01/26

Hardware	Torque Aluminum	Torque Steel to Steel
M6 Bolt	3 ft-lbs.	14 ft-lbs.
M8 Bolt	7 ft-lbs.	35 ft-lbs.
M10 Bolt	16 ft-lbs.	64 ft-lbs.
M12 Bolt	28 ft-lbs.	112 ft-lbs.

ATTENTION: Use correct torque settings to avoid damaging the running boards and or mounting brackets. Failure to do so will void your warranty. If you have any questions, please contact our technical team at 1-866-717-6645

Attention: Please make sure that you have the latest instructions from *Romik.com*


QR Scan

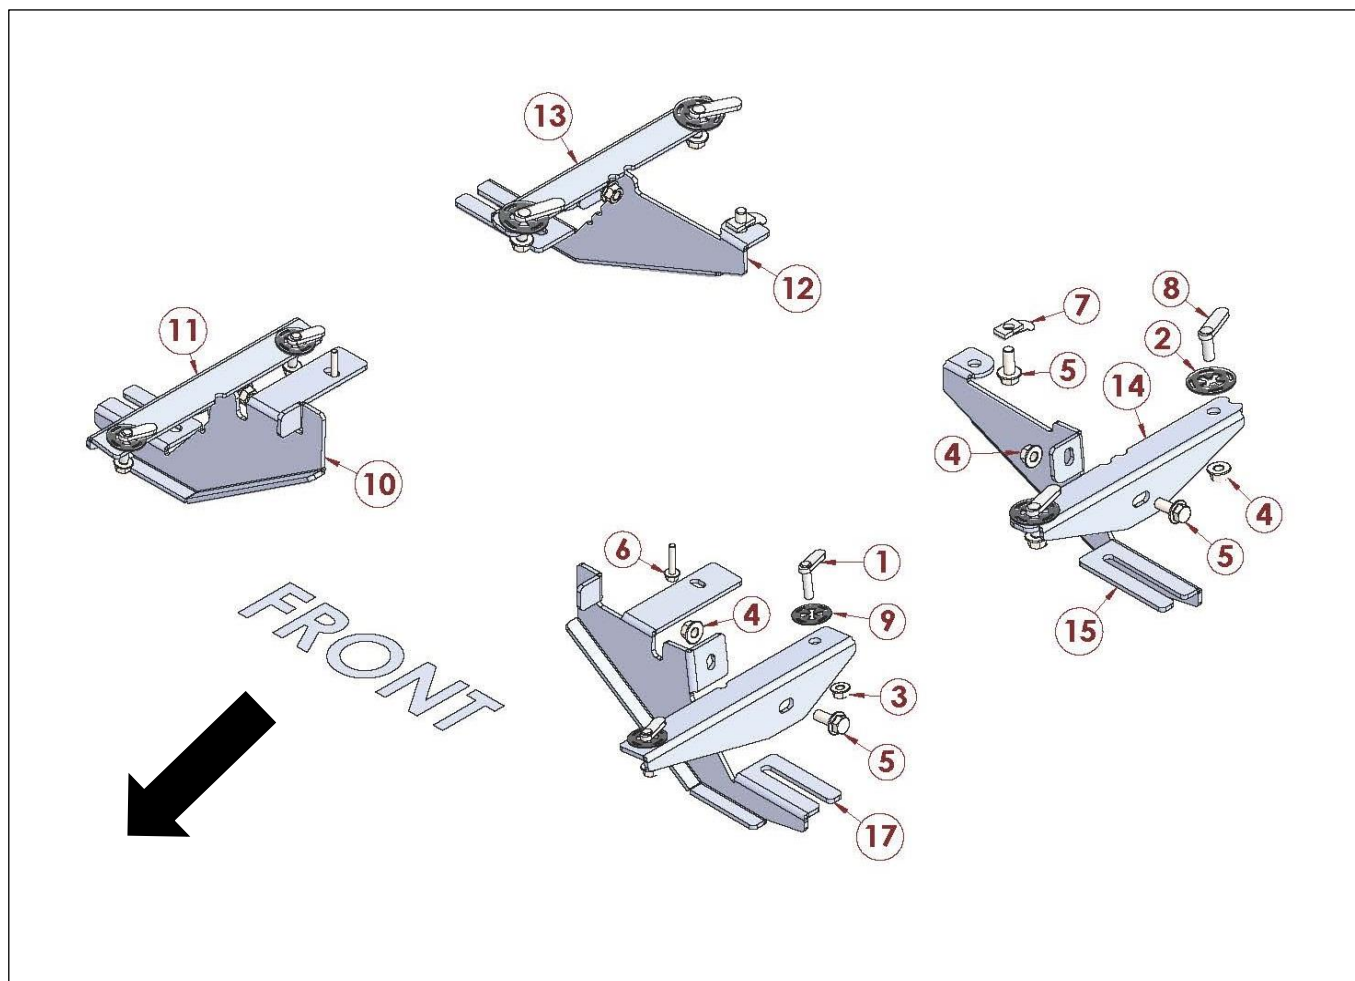

Item No:1 HTC 226 - M8X30 (4X10X37) (x4)	Item No:2 HTC 269 - CLIPS (M10) (x4)	Item No:3 Hexa Flange Nut DIN 6923 - M8 (x4)	Item No:4 Hexa Flange Nut DIN 6923 - M10 (x8)	Item No:5 DIN 6921 - M10 x 25 (x6)
Item No:6 DIN 6921 - M6 x 30 (x2)	Item No:7 HTC 325 - M10 (23,4x13,8x4) (x2)	Item No:8 HTC 243 - M10x25(4x12x50) (x4)	Item No:9 HTC 271 - CLIPS (M8) (x4)	Install Tip make sure to match markings
Item No:10 3247 Passenger Front (x1)	Item No:11 3247 Passenger Front Support (x1)	Item No:12 3247 Passenger Rear (x1)	Item No:13 3247 Passenger Rear Support (x1)	
Item No:14 3247 Driver Rear Support (x1)	Item No:15 3247 Driver Rear (x1)	Item No:16 3247 Driver Front Support (x1)	Item No:17 3247 Driver Front (x1)	

Installation Instructions 3247 Bracket Kit


Important Install Tip: When installing Romik HTC inserts follow the sequence below. Make sure the HTC is seated correctly and do not use power tools as this will only spin the insert and possibly damage it. Test by tugging on it before installing bracket. Blue loctite is highly recommended on all metal parts.

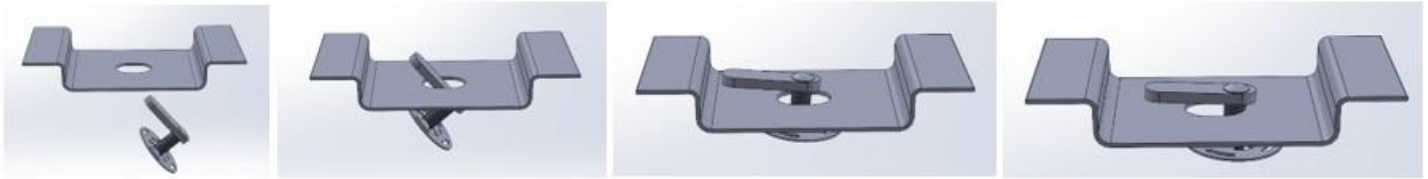

ATTENTION: Before startiing, note that due to body design a gap is visible when doors are open.

Panels were removed for illustration purposes. You do not have to remove the panels

Step 1 Front bracket: Remove front panel factory bolt (red circle) you may dispose of this bolt as it is no longer needed. Figure 1.

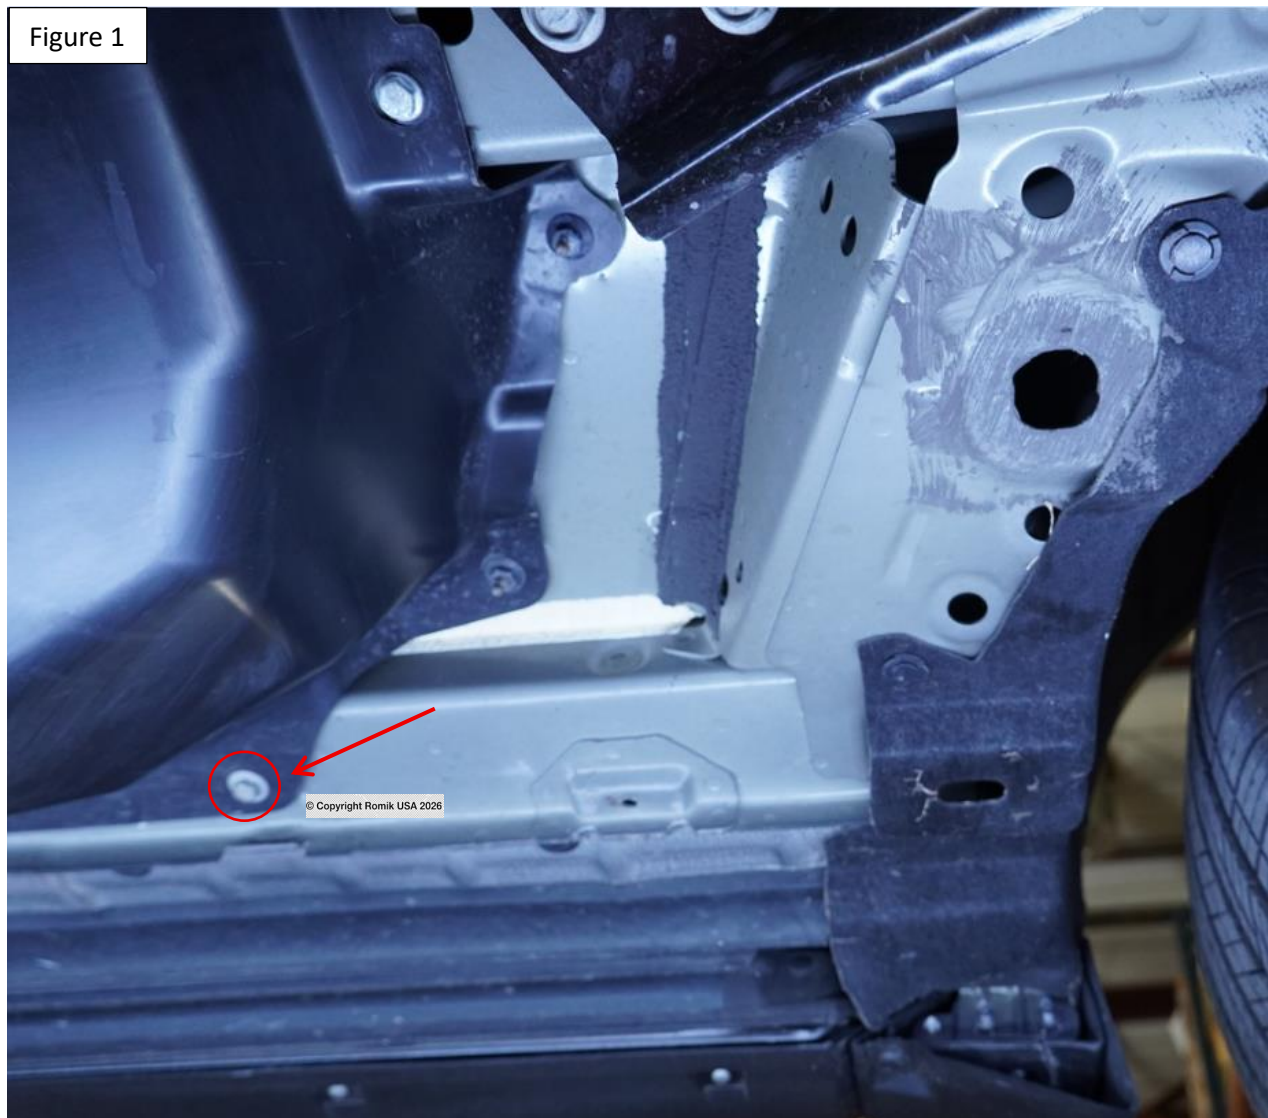

Installation Instructions 3247 Bracket Kit

Step 2: Remove plug #1 and #2. Install HTC 226 #1 with HTC 271 clips #9 Figure 2.


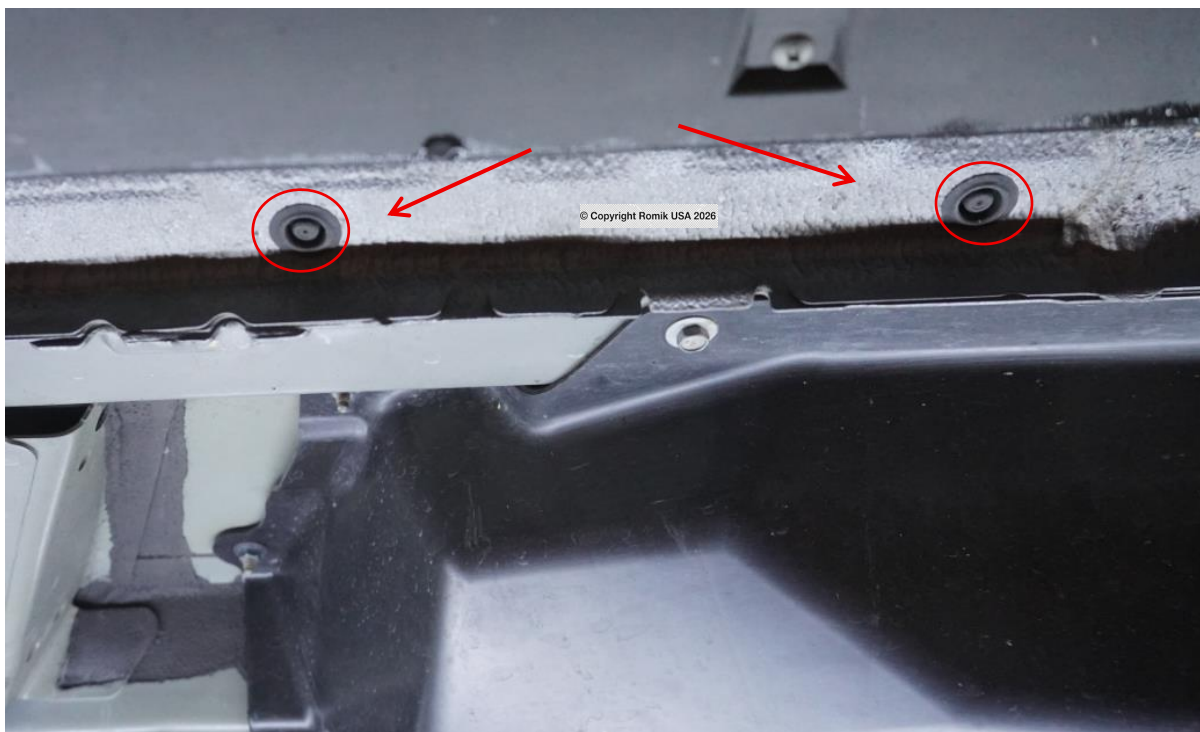


Figure 2

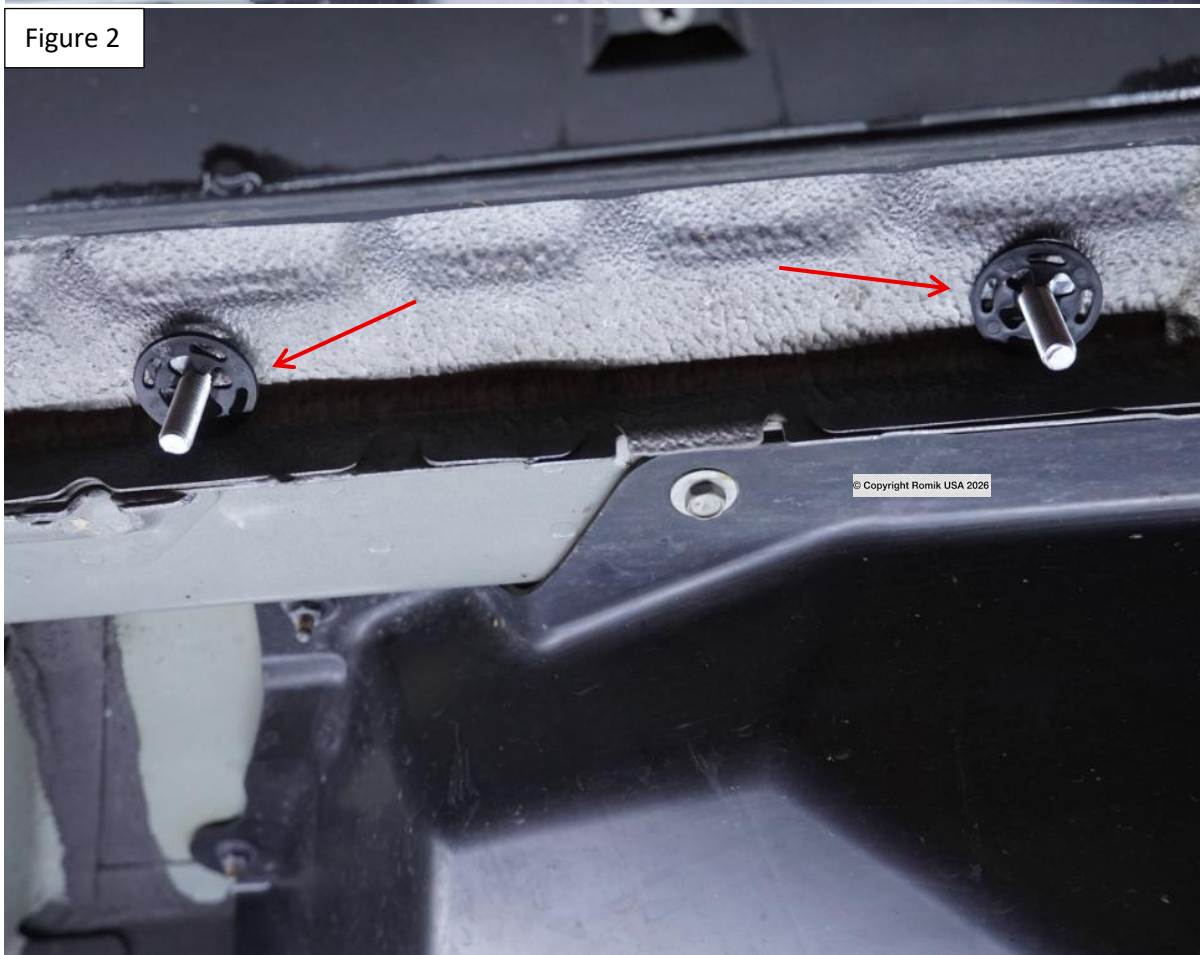

Installation Instructions 3247 Bracket Kit


Step 3: Install front bracket support Figure 3. NOTE offset hole towards the front of the vehicle.

Figure 3



Step 4: Install front bracket #17 using provided M-10 hardware #5 and M-6 Bolt #6 as shown. NOTE covers were removed for illustration purposes. Leave hardware **Hand tight only**.


Figure 4

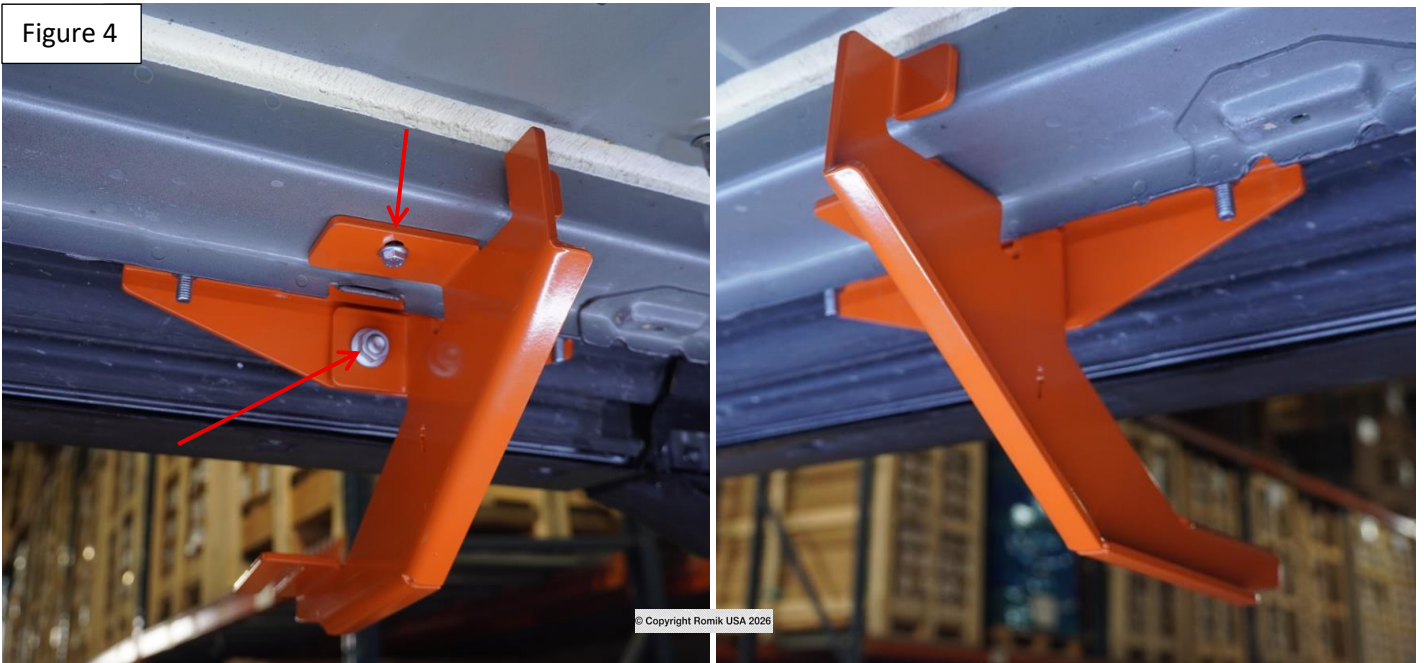

Installation Instructions 3247 Bracket Kit

Step 5 Rear bracket: Locate rear mounting area Figure 5, red arrow shows mounting points. Remove the two rubber plugs on the bottom of the picture. **Optional TIP:** Trim small section of panel rounding the area, Bracket may qill crush the plastic area if you chose not to trim.


Figure 5

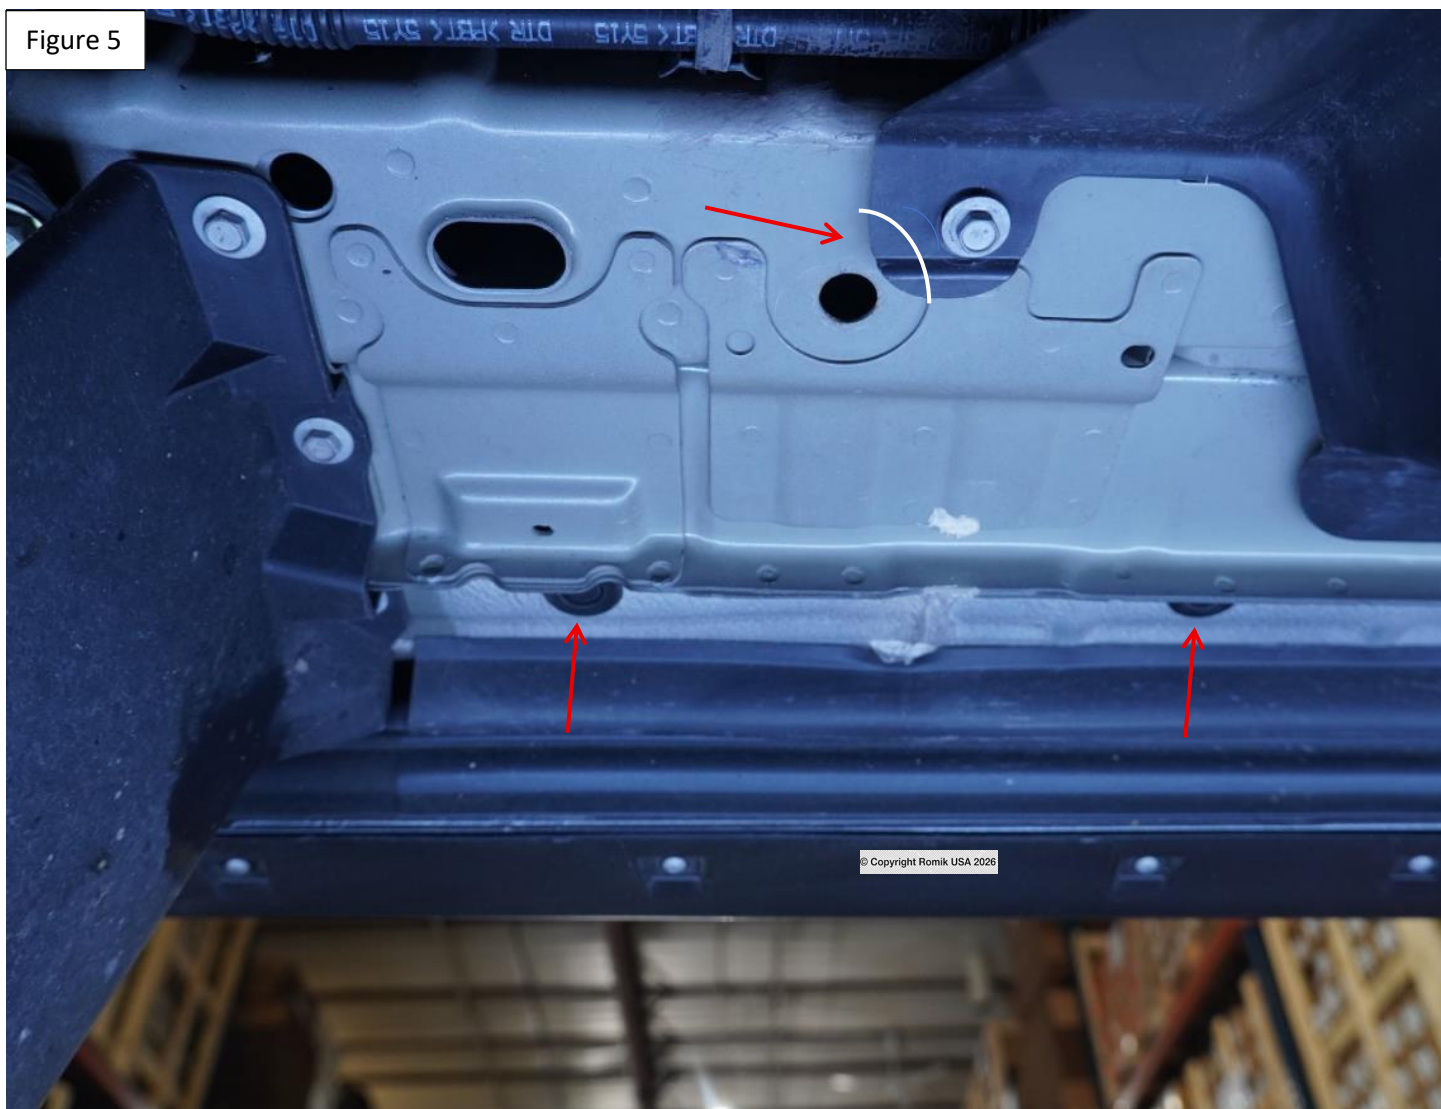

Installation Instructions 3247 Bracket Kit

Step 6: Remove factory rubber plug and install the HTC 243 #8 with HTC 269 #2 as shown Figure 6. Install rear bracket extra support #14 as shown.


Figure 6

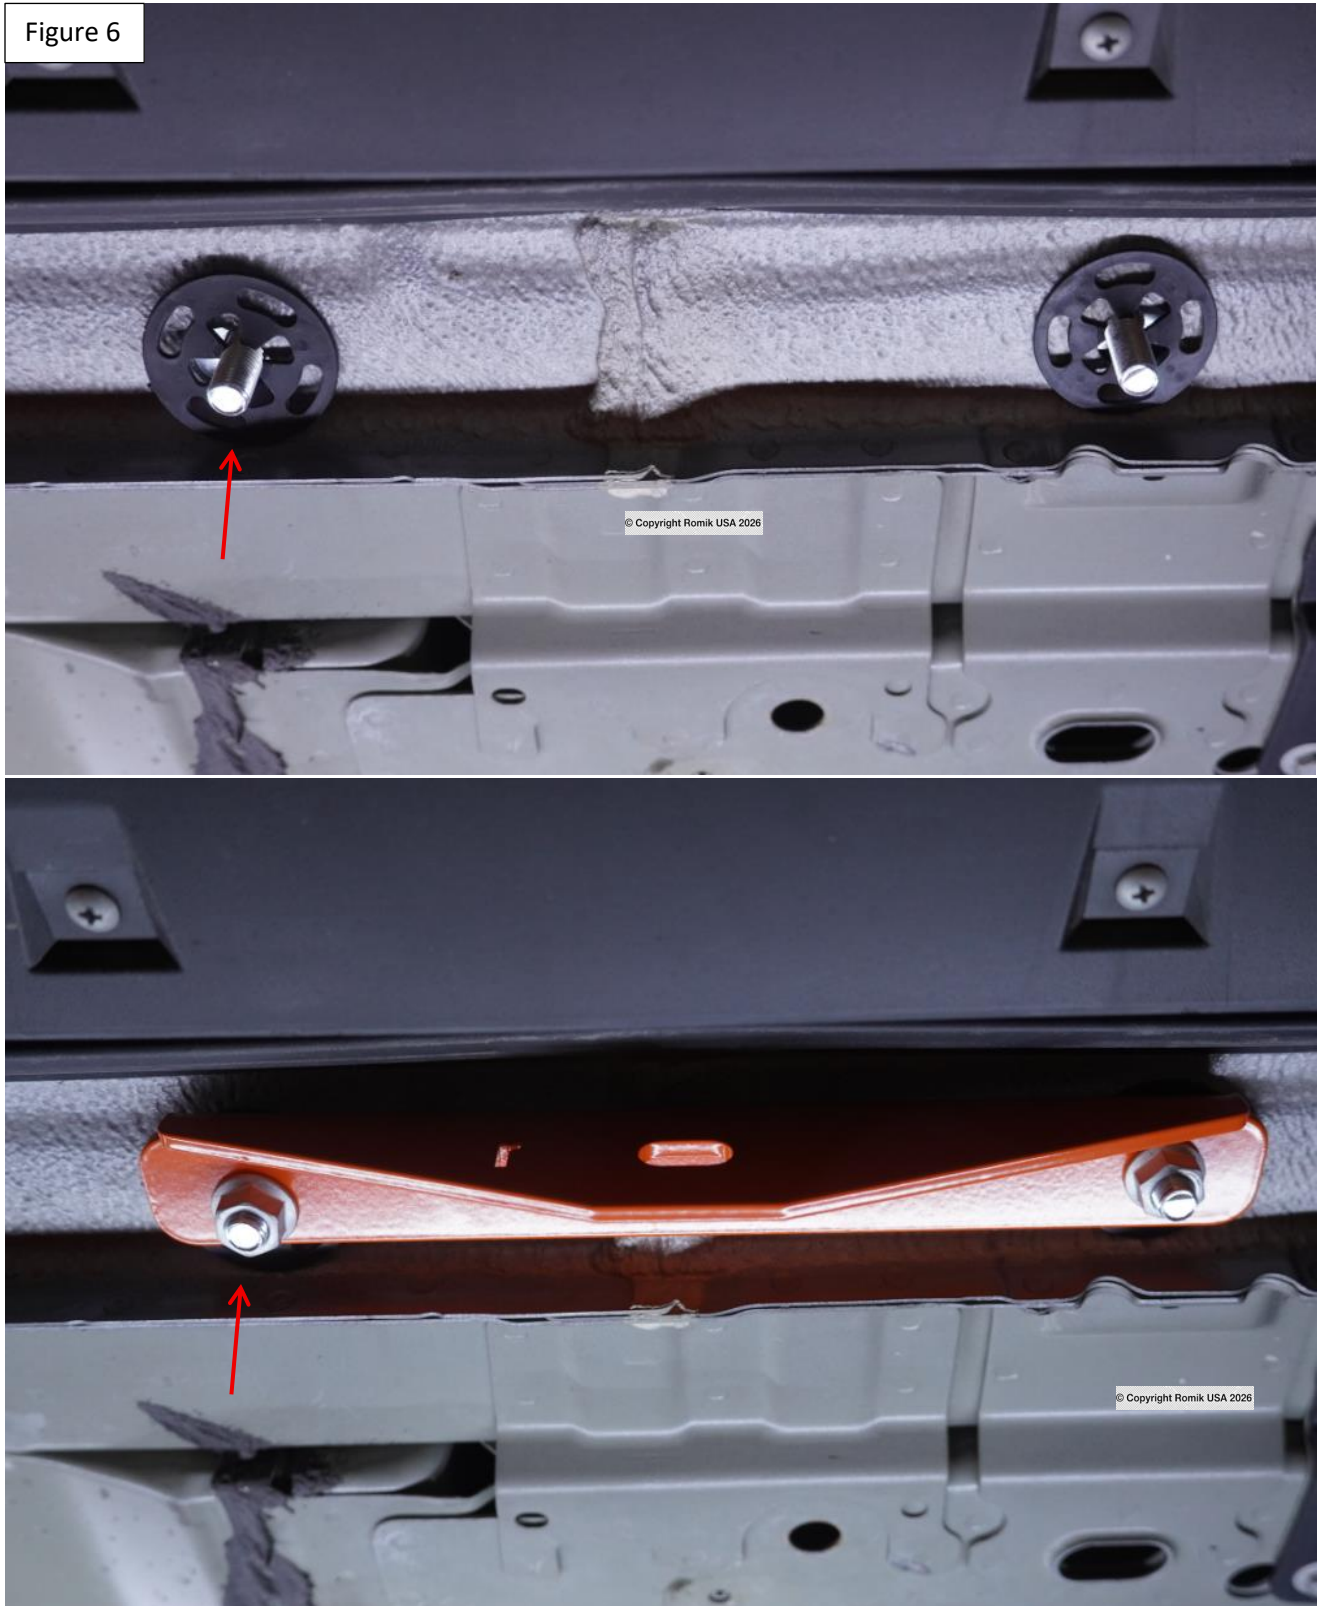

Installation Instructions 3247 Bracket Kit

Step 7: Insert HTC 325 #7 as shown in Figure 7. TIP with two fingers grab the thin metal strip and drive HTC into the hole. Once the insert clears twist the metal strip flat onto the bottom of the body.


Figure 7

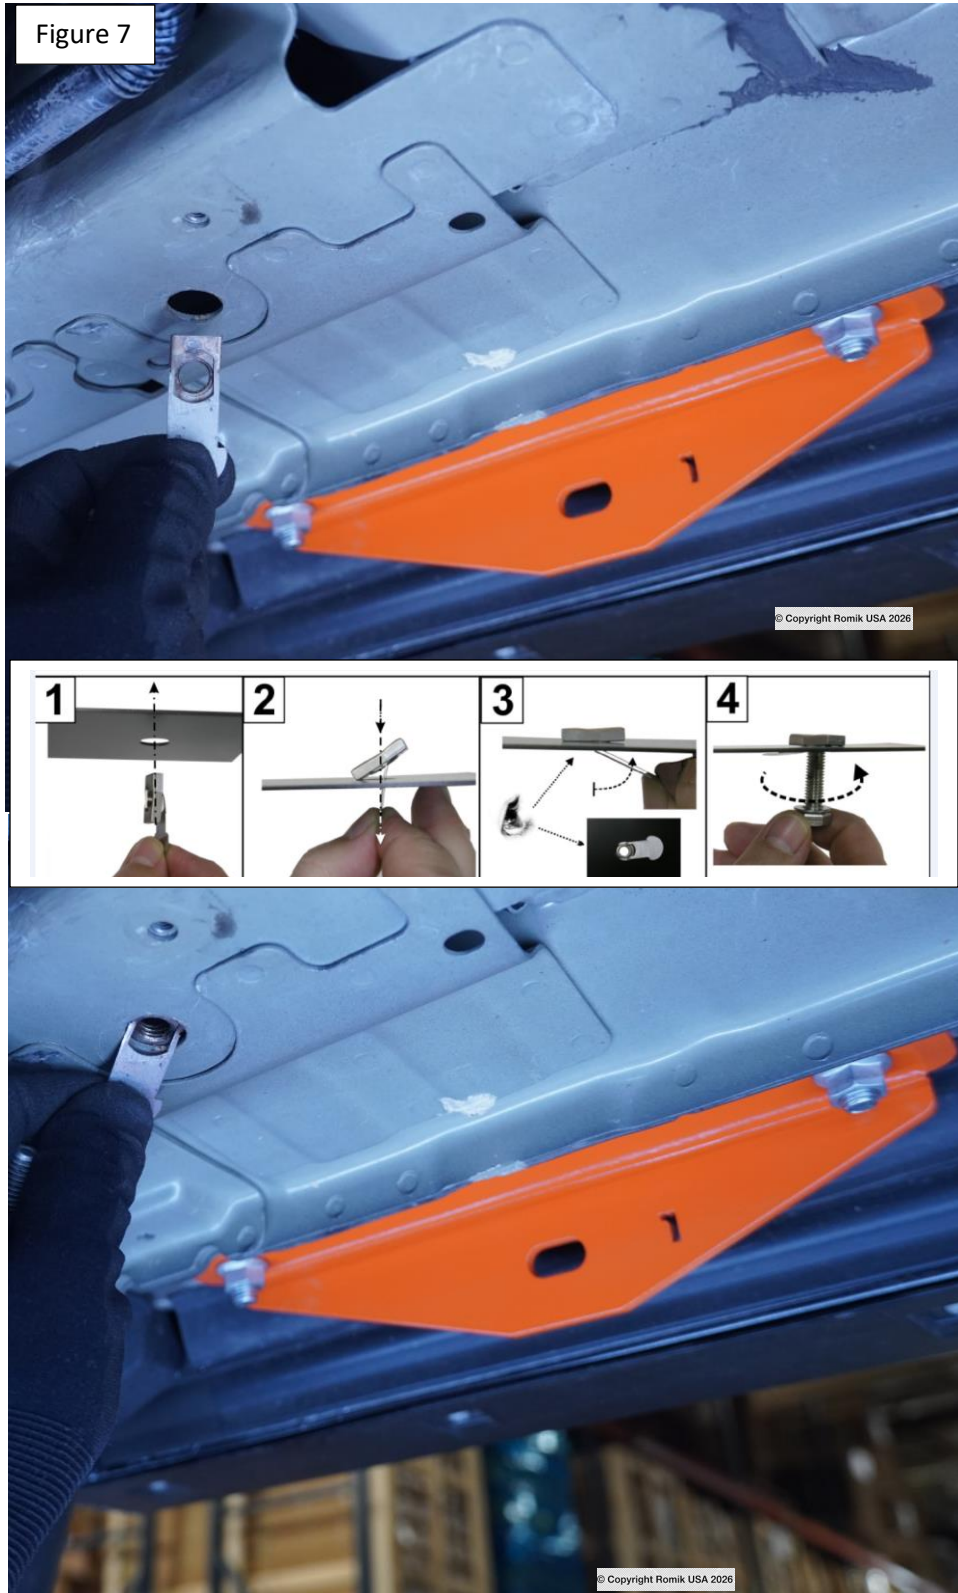

Installation Instructions 3247 Bracket Kit

Step 9: Locate the outer mounting point as shown on figure 11. Remove the rubber plug and install provided HTC 243 #5 and HTC 269 clips #2

Figure 8

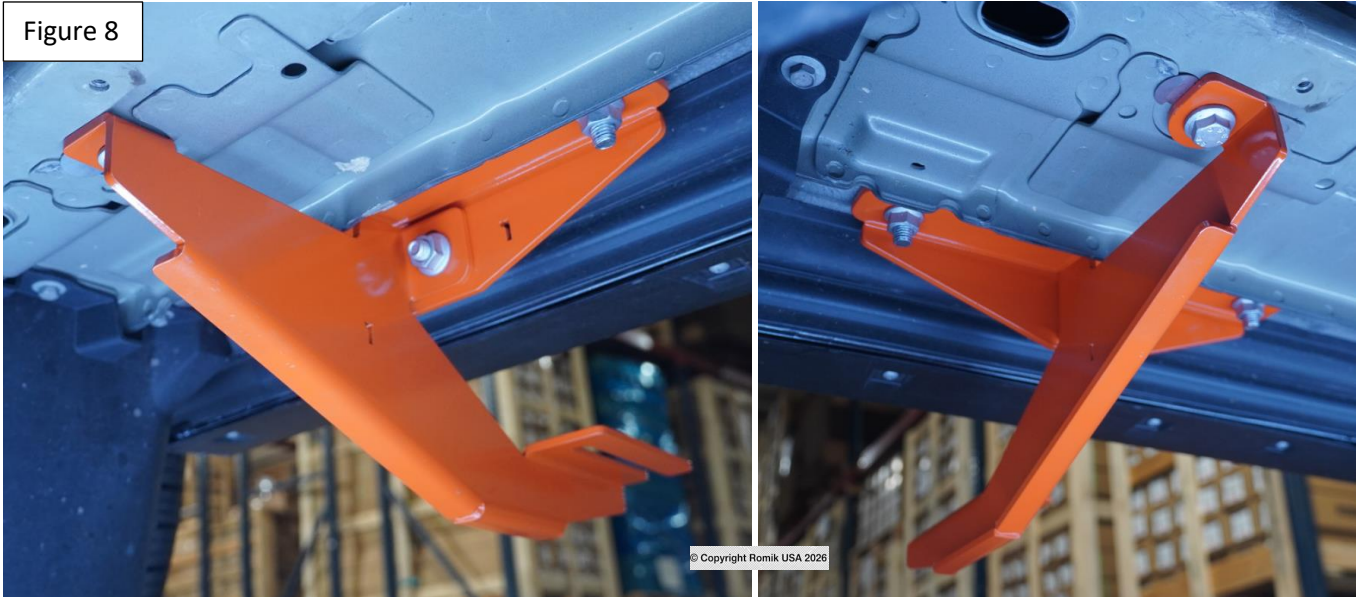

Step 10: Proceed to last page of this manual for running board install instructions and torque values. Using a level install running boards hand tight onto brackets. Once running boards are leveled tighten bracket to bracket connection.

NOTE: Due to body design running board cannot be pushed all the way forward

For Technical support please call our team at 1-866-717-6645 and one of our experts will assist you with this installation.

Thank you for choosing Romik.

NOTICE OF COPYRIGHT INFRINGEMENT

All designs, images, logos, and product data associated with Romik are the **exclusive intellectual property of Romik USA**. Unauthorized use, reproduction, or distribution of this material is strictly prohibited and will be pursued to the fullest extent of the law.

Installation Instructions Running Boards

NOTE: Use of power tools will damage the bottom of the running board and void your warranty.

Step 1: loosen the M8 hardware on back of the running boards.

Step 2: Slide running board onto brackets

Step 3: Tighten hardware to 7 ft lbs.




ROF/RPD/ROB Running boards

Step 1: Place clamping plate on top of running board as shown below. Make sure clamping plate sits correctly on running board surface.

Step 2: Install carriage bolts and plastic retaining clips as shown below.

Step 3: Install and tighten hardware to 7 ft lbs.

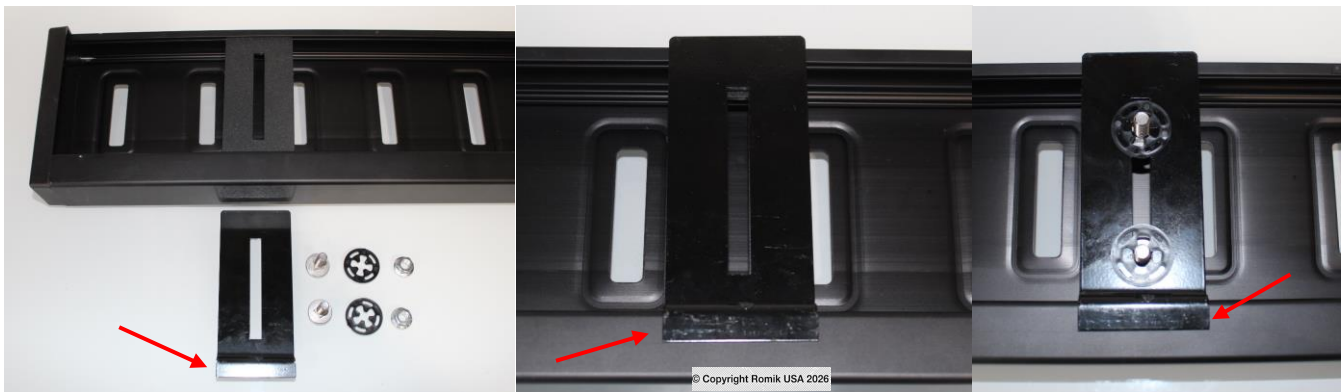

Product Registration and Warranty Information

- Register your Romik products at <https://romik.com/productregistration>
- Warranty information at <http://www.romik.com/warranty>



Cleaning and maintaining your Romik Running boards

Cleaning and maintaining your running boards is important, apply a light coat of a quality carnauba wax at least 2X per year. Wash often with mild soap and make sure to remove all soap residue. Many car automatic carwashes use a strong soap, make sure to use enough water to remove all residue.

For video instructions on how to clean your Romik products please click here <https://romik.com/cleaning>